User Manual

V97 HD

Karbonn All rights reserved

Table of Contents

Safety instructions ---------- 3
Device overview ---------- 4
Description of the buttons ---------- 4
Language settings ---------- 5
Power monitoring and charging the batteries ---------- 6
Screen lock ---------- 6
Connecting with computer and data transfer ---------- 7
Functions of the buttons on theUser interface ---------- 7
Programme menu ---------- 7
System settings ---------- 9
1. Wireless & Networks ---------- 10
2. Bluetooth setting ---------- 10
3. Sound settings ---------- 11
4. Display settings ---------- 12
5. Location & safety ---------- 13
6. Application ---------- 13
7. Accounts & sync-- ---------- 13
7. Data protection ---------- 13
9. Memory ---------- 13
10. Language & keyboard ---------- 14
11. Date & time ---------- 14
12. About the Tablet ---------- 16
Internet ---------- 16
Technical Data ---------- 17
Trouble shooting ---------- 18

Karbonn All rights reserved

This user manual contains important safety instructions and information for proper use of the device. Please follow the instructions in this manual carefully.

A Please keep the device away from places with high temperatures, high humidity or dust.

B In particular please avoid leaving the device in the car during summer if the doors are closed.

C Avoid shocks and do not let the device fall, as otherwise it may cause damage to the device.

D The Standby Time of the batteries may vary due to different environmental influences.

E We are not responsible for data losses that are caused by damage to the product, repairs or any other reasons.

F Do not open the housing of the device. Doing this will void your warranty claims.

G Do not use alcohol, thinners or petrol to clean the display – use only a dry cloth.

Karbonn All rights reserved

Device overview

Description of the buttons

Volume Buttons:
Increase or reduce the volume.

Power Key:
Press the button for 5~7 seconds to switch on or switch off the device. Short Press the button to enter or end the Standby-Mode.
Reset: Press the button for 10~15 seconds to reset the device.

Karbonn All rights reserved

Menu Button:
To open the menu

Home Button:
To go back to the Home Screen

Language setting

V97 HD is delivered with English as a default language. To change the language setting, please do the following:

- Press on the programme menu symbol on the right side of the screen.
- Select 'Settings' .
- Scroll to the end of the list.
- Select 'Language & keyboard'.
- Select 'Select language'.
- Type your preferred language.
- Press the 'Home' button to return to the home screen.

Karbonn All rights reserved

Power monitoring and charging the batteries

The battery charge symbol i on the status bar indicates the charging status of the batteries.
If the power goes down to empty, the device shuts off automatically. If power is empty, use the power adapter to charge the device.
The charging time for the battery is approximately 6~8 hours.

Screen lock

If the device is not used for specified time or press the 'Power' button briefly, the screen will switch off and display lock is activated. By pressing the 'Power' button briefly the screen will be reactivated. For unlocking the screen press the 'Lock' button in the specified direction.

Connecting to the computer and data transfer

V97 HD is equipped with a High-Speed USB2.0 Interface. After you connect the device to a computer, it appears in the status bar display.
Pull the status bar down and press 'USB Connection' to activate the USB Memory. When using the device for data transfer,
you cannot access the Micro SD/TF Card from V97 HD!

Karbonn All rights reserved

Functions of the buttons on the user interface:

Home Button:
To go back to the Home screen.

Menu Button: To open the menu.

Back Button:
To go back to the previous menu / previous page.

Program Menu Button:
To display the programs and applications.

Change Window Button:
The device has five desktops. You can press this button or push your finger on the touch screen to the side to navigate between different desktops.

WIFI / WLAN Signal Icon

Program menu

ApkInstaller:
Program for installing and uninstalling Apps that were not downloaded from the Android Market.

Market (Google Play Store): need gmail account to login Load Apps (programs) from the Android Market. You can download and install apps, games and other applications. Many are free.

Explorer:
Open the Explorer to access Micro SD TF Cards, USB sticks and other storage media. The Explorer is a practical manager for documents and all types of data.

Internet browser

Camera , Back camera is 5.0 MP. Click to auto focus

E-mail:
App for exchange email account set up, and compose/send/receive email

G-mail:
App from Google, receiving, processing and sending e-mails through Google account.

Google Maps:
Program for the display of maps or satellite images – Route planner.

Karbonn All rights reserved

Calendar:

Managing schedules – can be synchronised automatically with a Google account.

Pocket Calculator

Time:

Time display and setting alarm functions.

Settings:
Changing the basic settings of V97 HD.

Sound Recorder: Dictation Device Function.

Video Player

Gallery:
Manage and display images and videos – also enables synchronisation with Picasa web albums.

Karbonn All rights reserved

System settings

Touch the icon for the settings

to open the system settings menu:

1. Wireless & Networks

Touch ‘Wireless & Networks’.

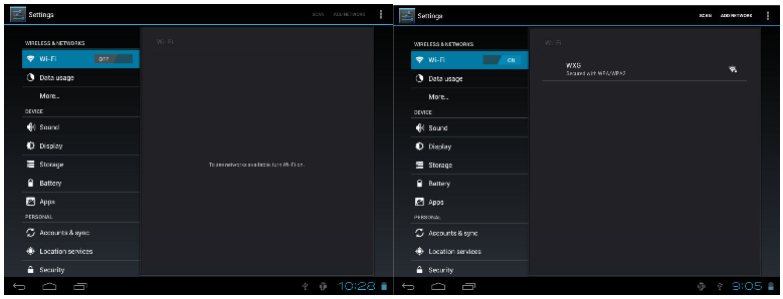

WLAN: Touch 

=>

to switch on the WLAN function.

The device automatically searches for available WLAN networks.

WLAN Settings: Select your network here.
If needed you will be requested to enter your WLAN password:

Karbonn All rights reserved

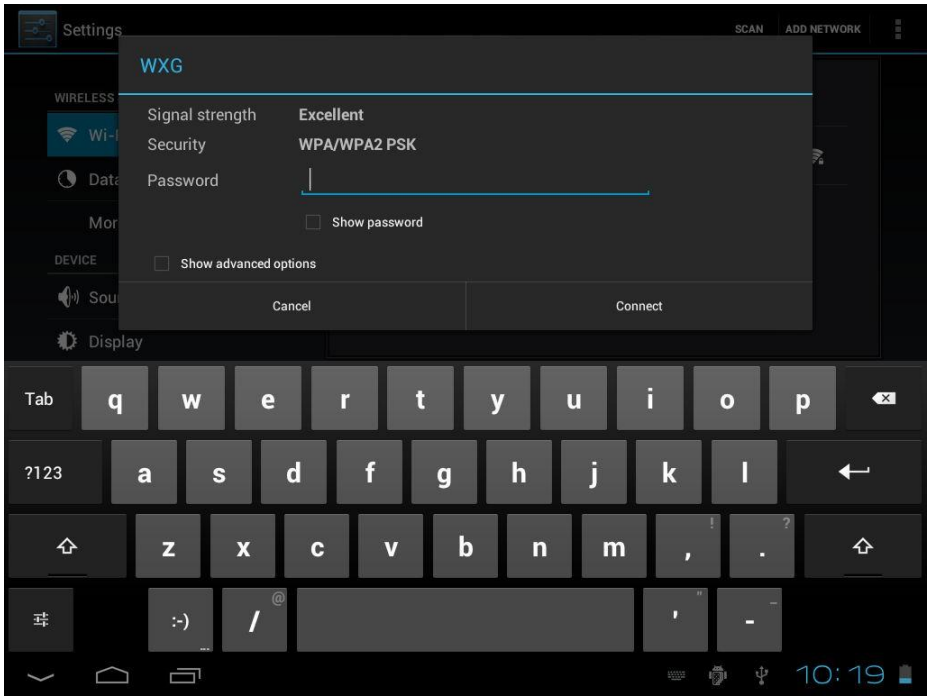

Advanced WLAN / Wi-Fi settings:

Touch in the menu for WLAN / Wi-Fi Settings, the menu for advanced settings will open up automatically. In the menu for the advanced settings you can view the current status, the IP address and other device information.

Karbonn All rights reserved

2. Bluetooth setting

Touch ‘Bluetooth’.

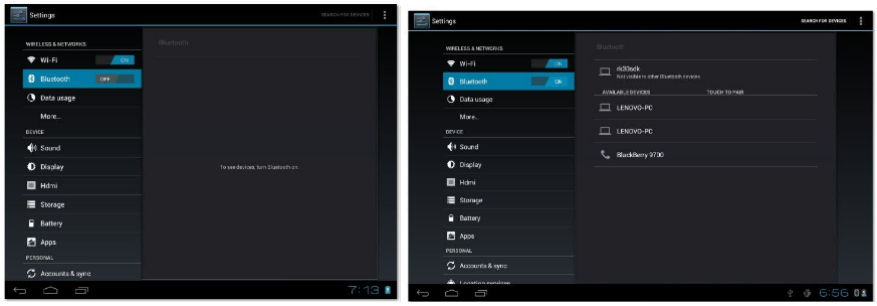

Bluetooth: Touch 

=>

to switch on the Bluetooth function.
The device automatically searches for available Bluetooth device such as Bluetooth Keyboard Suite.

Bluetooth match Settings: Select your Bluetooth device. Device might request to enter a pair password that show on a screen window

3. Sound settings

The ‘Sound’ settings contain the volume control, and selection of notification sounds, system sounds, and signal tones for Micro SD/TF Cards and USB signal tone.

4. Display settings

Includes brightness, automatic screen rotation (G-sensor), animations and display timeout time, Switch off display after =
15 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes or 30 minutes are available. For example, if you select 30 seconds,

the display will be switched after 30 seconds of inactivity and screen lock is activated. Press the ‘Power’ button to reactivate the Display. Push the ‘Lock’ button up to lift the screen lock.

5. Location & safety

Here you can activate the automatic recognition of the location.
You can also set security passwords which will prevent unauthorised access to your V97 HD.

6. Application
Here you can manage your apps and define if apps from sources other than the Android Market are allowed to be installed.

7. Accounts & sync.
General synchronisation settings:

1. Background data
2. Automatic synchronisation
Account management: Management of user accounts

8. Data protection
Secure my data: Here you can define if different settings should be stored on Google servers.

Touch ‘Reset to default’ to reset the device to factory settings.
All settings, self-installed apps and data stored on internal memory can be deleted.

9. Memory
Memory capacity report.

Karbonn All rights reserved

Touch ‘Remove SD Card’ to remove the Micro SD/TF Card during use.

10. Language and keyboard

Set the system language and input method.

11. Date and time

If your network does not support automatic setting of time, you can set the time, time zone and date manually after deactivating automatic settings.

12. About the Tablet

Here you can view device internal values such as operating system version, battery status, signal strength of the mobile network etc.

Karbonn All rights reserved

Main functions

Internet

Touch

Icon to surf the net. Google is the default start page.
Touch the input field to display the keyboard:

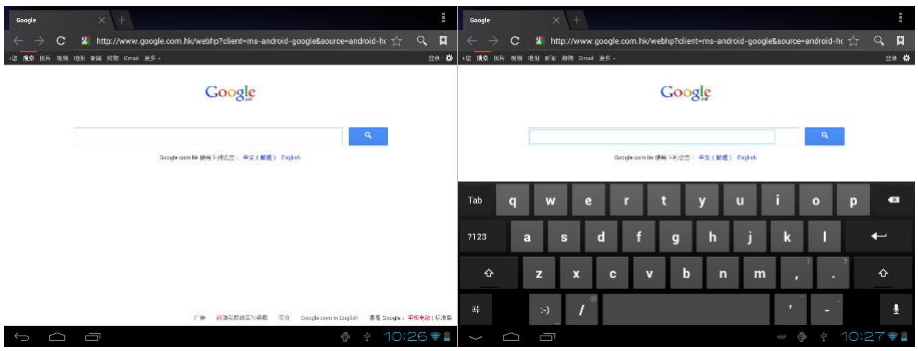

Touch after entering a website address to open the website.

Note: The Android keyboard has few options for settings such as: keyboard language, numbers and icons etc.

The Internet browser can open four websites simultaneously; Touch and the menu will be displayed as follows:

Karbonn All rights reserved

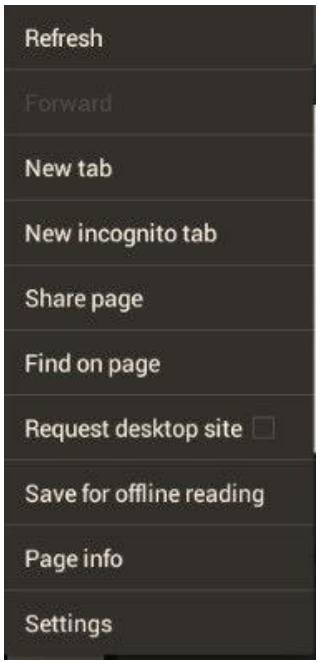

Touch ‘Refresh’ to refresh the current web page

Touch ‘New tab’ and a new website will be displayed.

Touch ‘New incognito tab’ and a new blank website will be displayed

Touch ‘Share page’ to Share this page to others Touch ‘Find on page’ to enter new web address Touch ‘Request desktop site’ to make it default web

Touch ‘Save for offline reading’ to read it when offline

Touch ‘Page info’ to check the web information

Touch ‘Settings’ to enter in browser settings

Karbonn All rights reserved

Technical Data

V97 HD	9.7" / 24.7cm Tablet-PC
CPU	Rockchip rk3188 Quad-core 1.8 GHz
Operating System	Android 4.1
RAM	2GB DDR3
Internal Memory	16GB NAND Flash
Memory Expansion	Micro SD/SDHC up to 32GB
Display	4:3 capacitive 10-point Multi-Touch-Display
Resolution	2048 x 1536 Pixel Retina display
G-SENSOR	MMA8452Q
Camera	Front 2.0MP, Back 5.0MP AF
Battery	10000MAH, 12V, 2A rechargeable Li-ion Battery
MIC	Yes
	Internet & Skype Phone-Function WIFI
	802.11b/g/n (high sensitivity) Bluetooth
	Build in
I/O ports	1x DC In, 1x headphone, 1x TF Card-Slot,
	1x USB 2.0, 1 host & 1 OTG, HDMI
Video-Formats	H.264, VP8, RV, WMV, AVS, H.263, MPEG4 etc 1080P,
	YouTube, 720P, HTML5, Flash 11
Office	Word / Excel / PDF / PPT, Microsoft Word pad,
	Microsoft Spread Excel
	The software is not on the device user can find in the internet or Google play store
Images	JPG, BMP, PNG etc.

Trouble shooting

In seldom conditions, the device might not work properly due to the misusage or firmware; the device has below solution as reference and will also release new firmware regularly to improve user experience:

Touch panel can not work accurately
Solution: When the battery gets low to 10% or less, the touch panel might not work accurately, the device needs recharge.

Can not wake the V97 HD up from the sleep mode
Solution: Long press the power button 10 seconds to power off the device forcibly and then restart

Device switches off accidentally or can not power on Solution:
Battery might be empty or getting close to empty, recharge the device for 5~8 hours then power on.

Operation become slow and can not run the app efficiently Solution: There might be too many apps run in the background which occupy too much RAM. Install a task manager from app store
and click on the "Task manager" app and stop the unnecessary apps.

Tablet can not boot completely and stay in the "Android" icon Solution:
Power off the device and reload the FW into the device. About how to reload the FW please refer to the Web site Support.

Thanks for purchasing of this device, if there are issues need support, you can
Email: info@karbonn-mobiles.com